CLEAR COMFORT: Quick Guide

Surge Pit Diffuser Installation



KIT CONTENTS:










Air Compressor Enclosure

Air Tubing


Junction Box


INSTALLATION INSTRUCTIONS:

- Mount the Clear Comfort system near the surge pit to minimize the length of blue Air Tubing.
- Mount the Air Compressor near the Clear Comfort system. Connect blue Air Tubing from the Compressor's barb fitting to the bottom of the Clear Comfort system's flowmeter (attached to the right side of the system) and secure with hose clamps.

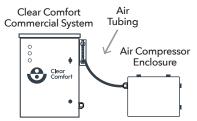

 - 3. Run Air Tubing from the Clear Comfort System into the surge pit.
 - If needed, core drill through concrete floor.
 - If tubing needs to cross a floor, route
 Air Tubing through grating or hatch and
 use conduit that is secured to floor.
- Connect the barb fitting(s) and Diffuser(s) to the PVC Diffuser Manifold(s).
 Important: **Do not overtighten** diffuser, cracking of the PVC tee may occur.



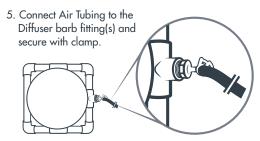

 If installing a CCW300 or CCW500 system, connect the included 1/4" splitter barb fitting to the Air Tubing at the bottom of the surge pit.


Then separate

Then, connect Air Tubing from the splitter to each Diffuser and secure each connection with clamps.



- In the surge pit, position Diffuser(s) near the location that water enters the pit and away from the pump suction.
- Mount the Junction Box on a wall. Insert the Clear Comfort system cord into the Junction Box's open watertight strain relief fitting and connect wires to the provided lever nuts: green to green, black to black and white to white.
- Plug in the Junction Box's power cord, press the Clear Comfort system's power button ON and use the flowmeter's adjustment knob to set the flow rate.



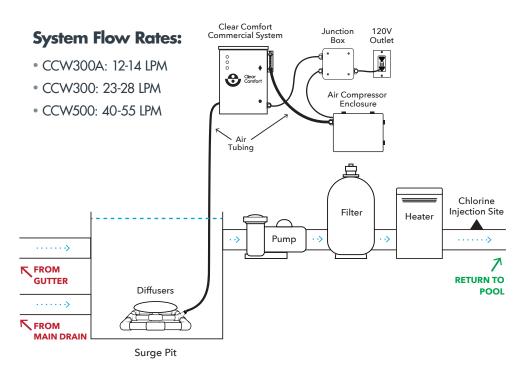

PLEASE NOTE:

 Not all Surge Pits are designed the same. For additional installation questions, please use the information below to contact Clear Comfort's customer success team.